



- 002
OHK Kit
- 011
Filter Kit
- 400
Tech Manual

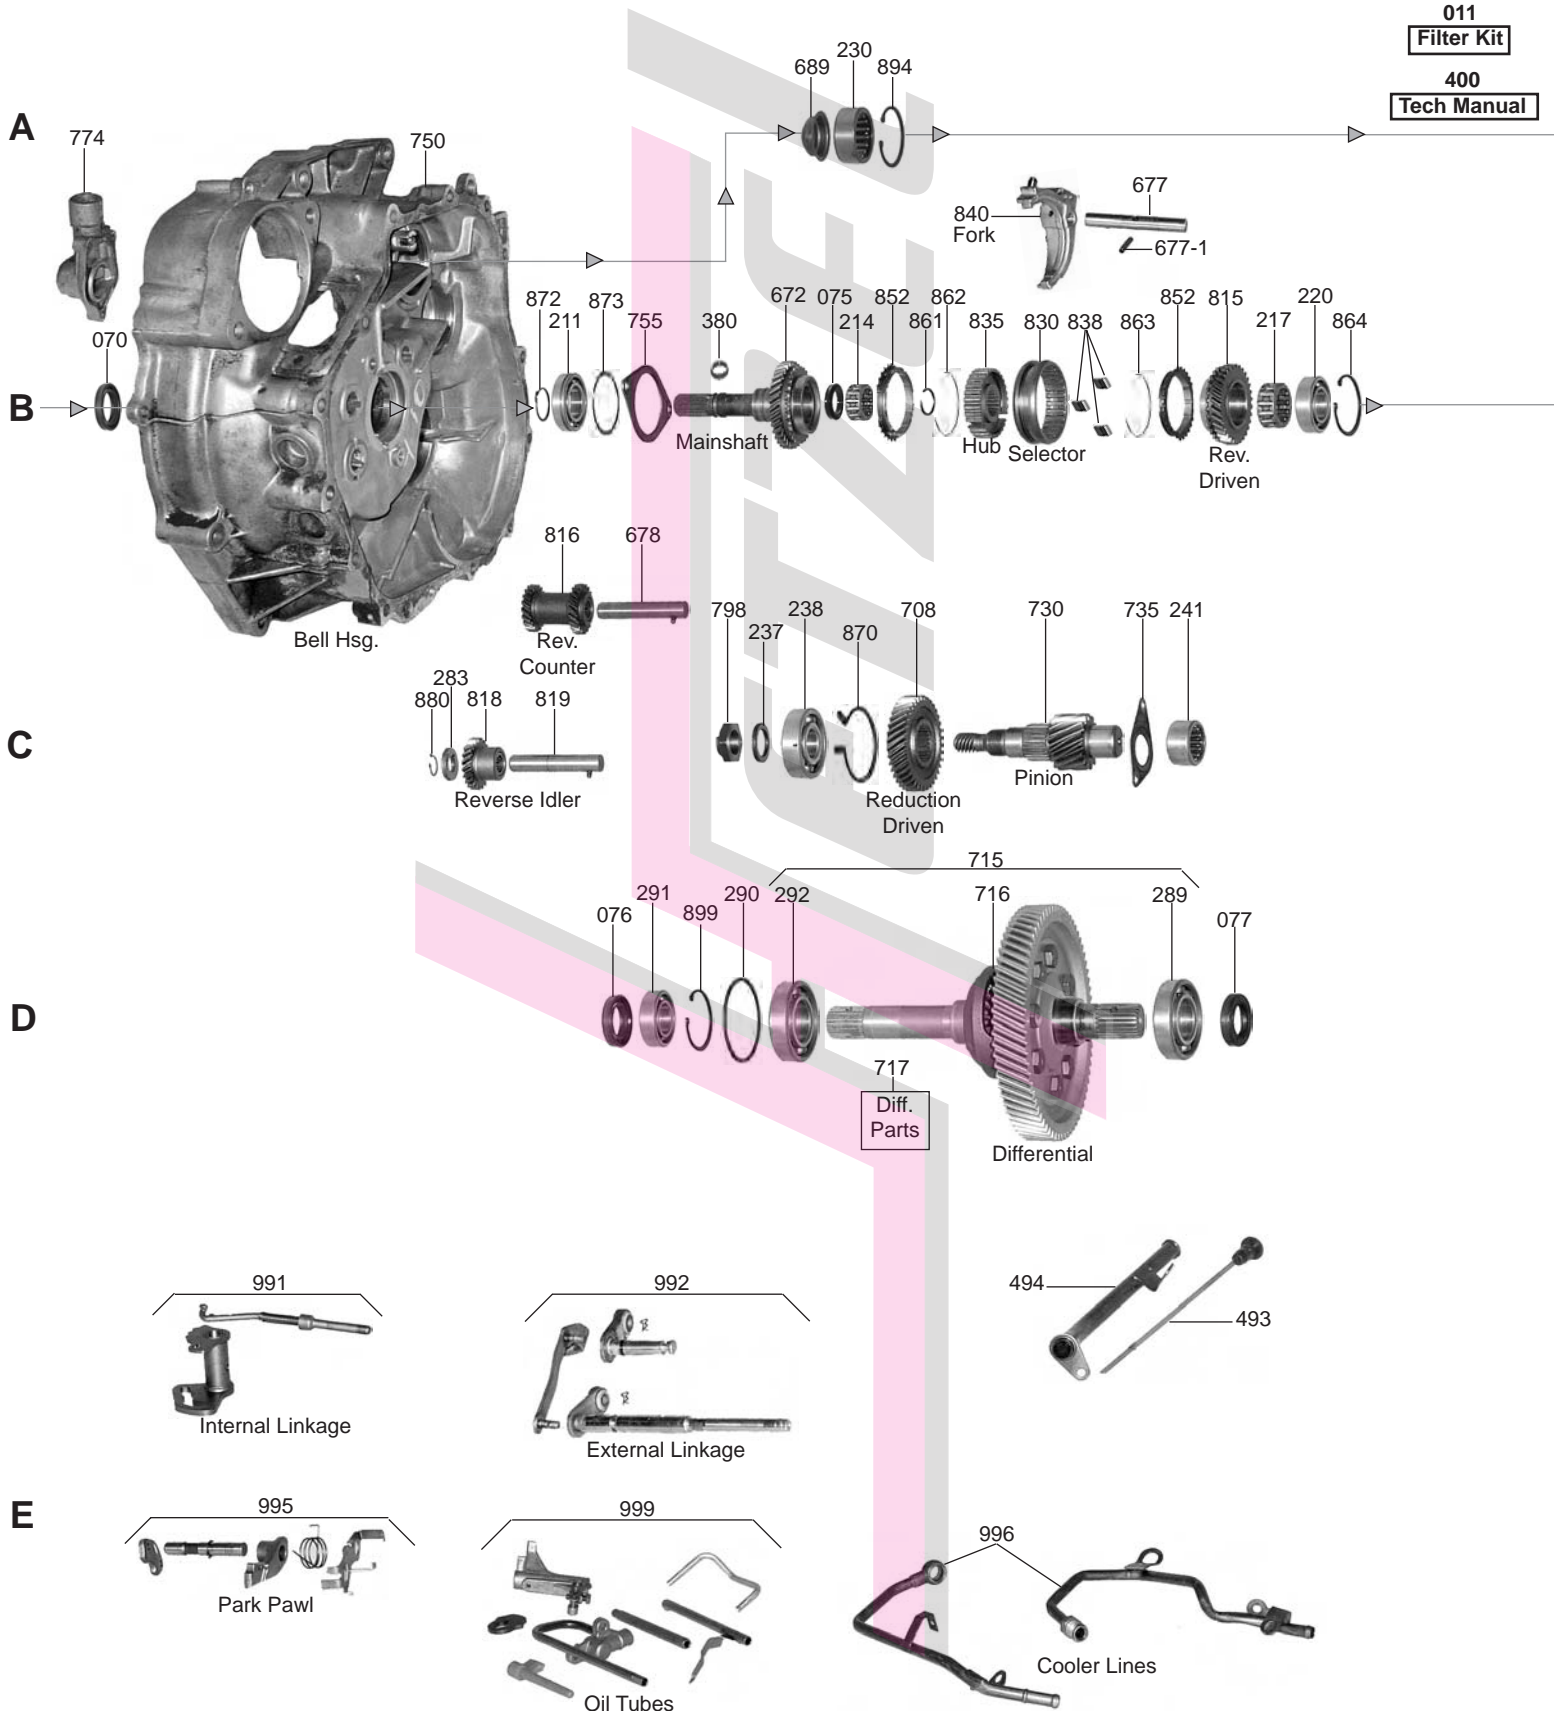

SUBARU

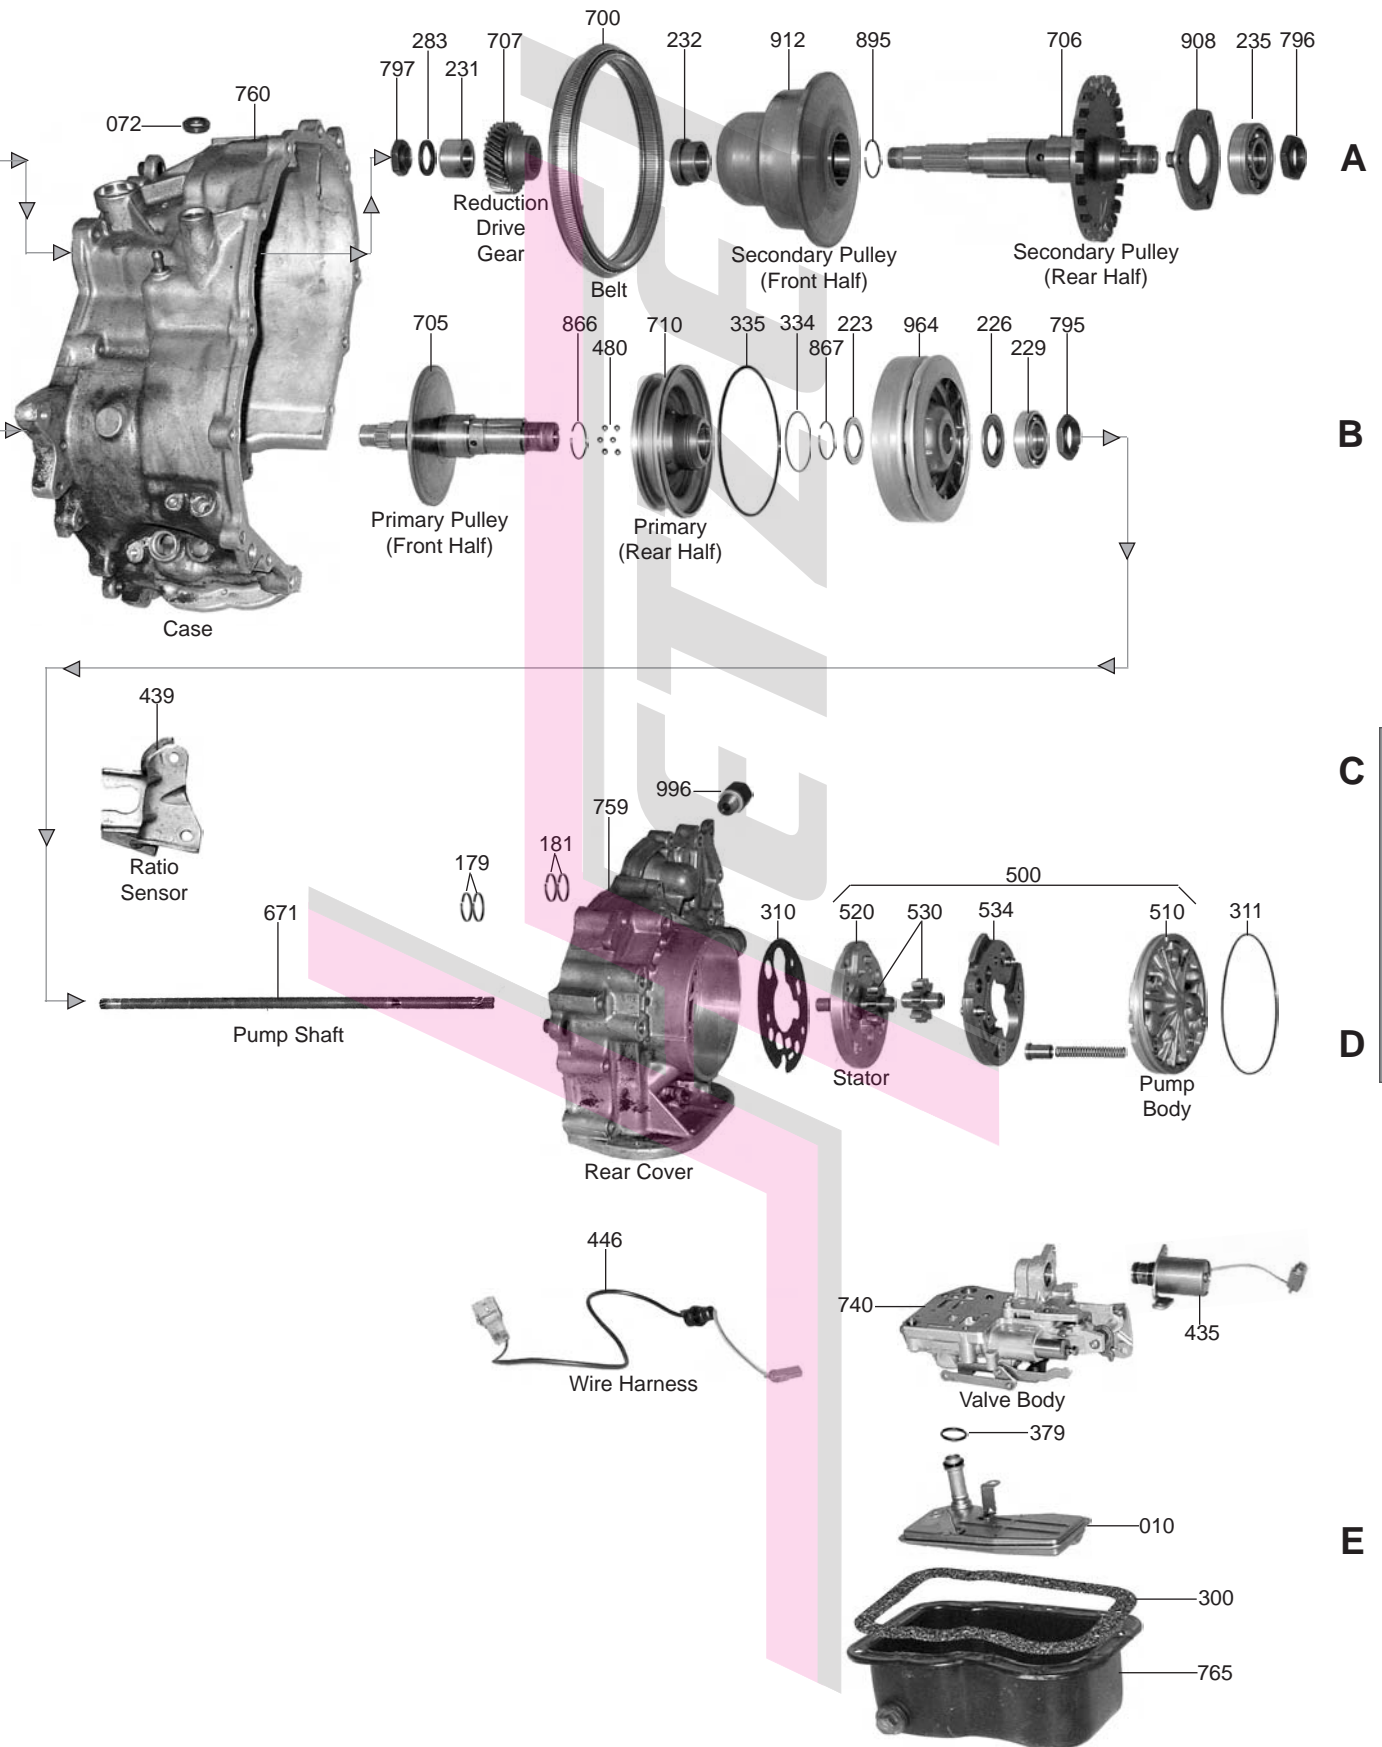

SUBARU


PART #	OVERHAUL KITS	QTY.	REFERENCE #
133002A	Overhaul Kit, ECVT (Subaru, Justy) 1989-94	1	
PART #	FILTER	QTY.	REFERENCE #
133010A	Filter, ECVT (Subaru, Justy) 1989-94	1	
PART #	FILTER KIT	QTY.	REFERENCE #
133011A	Filter Kit, ECVT (Subaru, Justy) 1989-94	1	
PART #	METAL CLAD SEALS	QTY.	REFERENCE #
133070A	Seal, ECVT Front	1	
133072A	Seal, ECVT Manual Shaft	1	
133073A	Seal, ECVT Shift Lever	1	
133077A	Seal, ECVT Axle (Right Side) (With Left spiral)	1	
133077A	Seal, ECVT Axle (Left Side) (With Right Spiral)	1	
133078A	Seal, ECVT Speed-O Shaft	1	
PART #	WASHERS & BEARINGS	QTY.	REFERENCE #
133214A	Roller Bearing, ECVT (Mainshaft) Front	1	
133217A	Roller Bearing, ECVT Inside Reverse Driven Gear	1	
133220A	Ball Bearing, ECVT Reverse Driven Gear To Rear Cover	1	
133223A	Washer, ECVT Mainshaft To Drive Housing	1	
133226A	Washer, ECVT Drive Pulley To Ball Bearing	1	
133229A	Ball Bearing, ECVT Mainshaft (Rear)	1	
133231A	Race, ECVT Inner Countershaft (Front)	1	
133233A	Washer, ECVT Countershaft To Rear Roller Bearing	1	
133234A	Needle Bearing, ECVT Countershaft To Case Front	1	
133235A	Ball Bearing, ECVT Countershaft Rear To Case	1	
133237A	Washer, ECVT Nut To Differential Idler	1	
133238A	Ball Bearing, ECVT Idler Shaft (Front) Differential Idler	1	
133241A	Needle Bearing, ECVT (Rear) Differential Idler Shaft	1	
133283A	Roller Bearing, ECVT Reverse Idler Gear To Shaft	1	
133289A	Ball Bearing, ECVT Differential Ring Gear Side	1	
133290A	Washer, ECVT Differential Housing To Bearing	1	
133292A	Ball Bearing, ECVT Differential	1	
PART #	GASKETS & RUBBER COMPONENTS	QTY.	REFERENCE #
133300A	Gasket, ECVT Pan (Cork)	1	
PART #	TECHNICAL MANUALS	QTY.	REFERENCE #
133400A	Technical Manual, ECVT Belt Drive Subaru (Justy)	1	
PART #	HARD PARTS	QTY.	REFERENCE #
133500A	Pump Complete, ECVT	1	
133671A	Pump Shaft, ECVT Drive (12 Splines On One End, 13 Splines On The Other End)	1	
133672A	Main Shaft, ECVT With Forward Drive Gear (33 Teeth)	1	
133677A	Shaft, ECVT Shift Fork	1	
133678A	Shaft, ECVT Reverse Counter Gear	1	
133700A	Belt Drive, ECVT (25 1/2" Circumference)	1	
133700B	Belt Drive, ECVT (28" Circumference)	1	
133705A	Primary Pulley, ECVT (Front Half) 7 1/8" Long (5 3/8"OD With Bearing)	1	
133705B	Primary Pulley, ECVT (Front Half) 8 1/2" Long (6 1/4"OD Without Bearing)	1	
133706A	Countershaft, ECVT With Rear Driven Pulley Half	1	
133707A	Gear, ECVT Output Countershaft (29 Teeth)	1	
133707B	Gear, ECVT Output Countershaft (28 Teeth)	1	
133708A	Gear, ECVT Differential Idler (37 Teeth)	1	
133708B	Gear, ECVT Differential Idler (38 Teeth)	1	
133710A	Drive Pulley, ECVT Rear Half	1	
133715A	Differential Assembly, ECVT (70 Teeth) 2 Groove	1	
133730A	Pinion, ECVT With Idler Shaft (15 Teeth With Speed-O Gear)	1	
133735A	Retainer, ECVT Bearing	1	
133740A	Valve Body, ECVT (2 WD)	1	

133750A Bell Housing, ECVT (4x4) Front Case Half 1
133750B Bell Housing, ECVT (2 WD) Front Case Half 1
133759A Rear Cover, ECVT (Rear Case) 1
133760A Case, ECVT Center Section (2 WD) 1
133760B Case, ECVT Center Section (4x4) 1
133765A Pan, ECVT 1
133774A Housing, ECVT Driven Speed-O Gear 1
133795A Nut, ECVT Mainshaft 1
133796A Nut, ECVT Countershaft (Rear) 1
133797A Nut, ECVT Countershaft (Front) 1
133798A Nut, ECVT Idler (Differential Idler) 1
133815A Gear, ECVT Reverse Driven (31 Teeth) Mainshaft 1
133816A Gear, ECVT Reverse Cluster (19 Teeth & 20 Teeth) 1
133818A Gear, ECVT Reverse Idler With Shaft (21 Teeth) 1
133819A Shaft, ECVT Reverse Idler 1
133830A Selector, ECVT Forward & Reverse 1
133835A Hub, ECVT Selector 1
133836A Synchronizer Ring, ECVT (Forward & Reverse) 1
133838A Dog Assembly, ECVT With Rings 1
133840A Shift Fork, ECVT Selector 1
133844A Tube, ECVT Pilot 1
133861A Snap Ring, ECVT Holds Selector Hub To Shaft 1
133862A Snap Ring, ECVT Hub To Mainshaft 1
133863A Snap Ring, ECVT Selector To Reverse Driven Gear 1
133864A Snap Ring, ECVT Ball Bearing To Case 1
133866A Snap Ring, ECVT Drive Pulley (Front) 1
133867A Snap Ring, ECVT Drive Pulley (Rear) 1
133870A Spacer, ECVT (Horse Shoe) 1
133880A Snap Ring, ECVT Reverse Idler 1
133908A Retainer, ECVT Bearing 1
133964A Drive Pulley Housing, ECVT 1
133991A Linkage Assembly, ECVT Internal 1
133992A Linkage Assembly, ECVT External 1
133995A Park Pawl Assembly, ECVT 1
133999A Oil Tube Assembly, ECVT 1


Technical Bulletin #122

Belt Handling Precautions


The belt is made up of 280 individual segments and 10 steel bands special care must be exercised when handling the belt to prevent accidental disassembly of the belt.

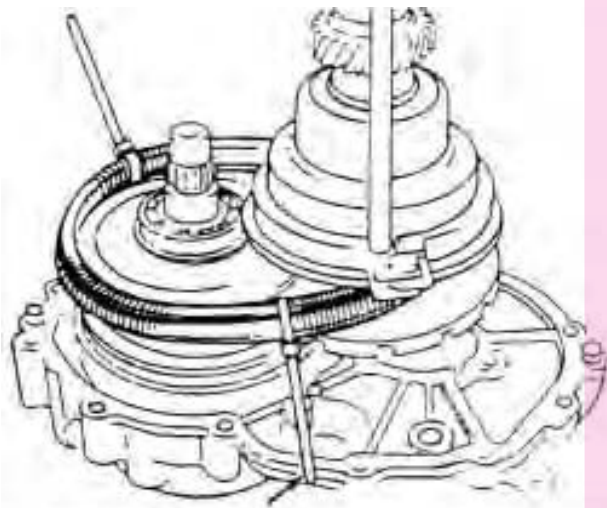

Install tie-raps on the belt before attempting to remove it from the pulley.

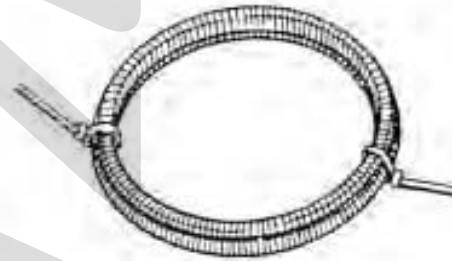

Always store the belt with the tie-raps on. Never remove the tie-raps until AFTER it is installed on the pulleys.

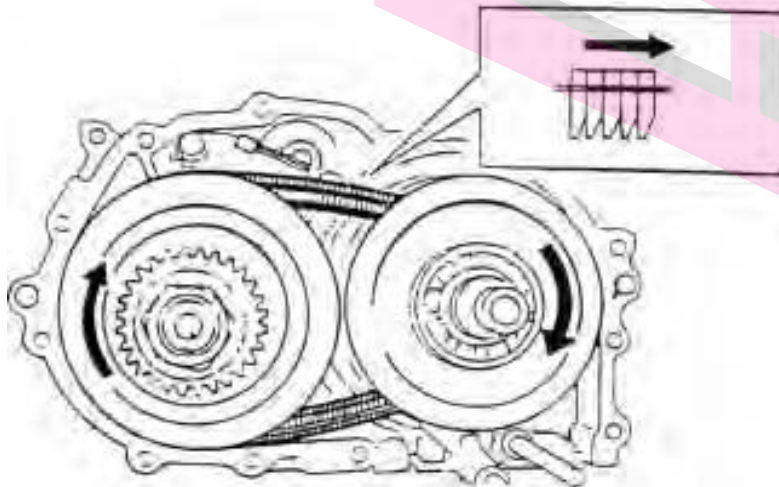

The belt is direction sensitive. It must face the direction shown.

SUBARU